

[illegible]

Level 2: Functions overview

NOTE: Menus 5-8 are disabled

Press "+" or "-" button to scroll or navigate through menus.

CAUTION

The higher the sensitivity setting in menu 3 and 4, the higher the operator force capabilities or less sensitive operation.

Level 2 – Opener settings																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	OFF	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	OFF	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

Level 4 – Transmitter code programming



Menu 2: Intermediate position



LED 7 flashes slowly -> use transmitter button other than those designated for garage doors
-> LED 7 flashes quickly

Level 5: Functions overview

Level 5 - Special Function																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Menu 4: Operator Light "ON" Timer (in seconds)																
	2	5	10	15	20	25	30	35	40	50	80	100	120	150	180	255

Level 6: Functions overview

Level 6																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Menu 3: Soft run position OPEN																
	Set using the (+ / OPEN) and (- / CLOSE) buttons															
Menu 8: Soft run position CLOSE																
	Set using the (+ / OPEN) and (- / CLOSE) buttons															

Legend:	
LED off	○
LED on	●
LED flashes slowly	⚙️
LED pulses	⚙️
LED flashes quickly	⚙️
Factory default setting	
Not possible	-

Advanced settings programming flow chart (Diagram illustrates: Level 2, Menu 2)

CAUTION

Additional operator functions can be set using the advanced operator functions. Parameters factory default settings can be restored. This programming may only be carried out by a professional installer.

