

# **Power Master Chrome Series Wireless Keypad User Manual - Part# PM654**

## **I. Safety Instruction**

- Please read the instructions carefully before installing and programming.
- Program a code with numerical value that is easy to remember.
- This product should only be used for automatic gates and other similar mechanical devices.

## **II. Product Instruction**

- The PM654 is a 2-channel wireless keypad and only can be activated by pressing correct password.
- It is only compatible with the our receivers.
- It can be installed both inside and outside of your property.
- This product can ensure maximum safety because of its rolling code technology.
- Working range can reach up 300' in an open area.
- Working voltage is 3V; Weight 8 ounces; Dimensions are L:3.6" W: 2.8" D: 1.7"
- Typical battery life is 2 years with an average of 10 operations per day.
- If LED light 2 is on it is indicating that the battery voltage is low.

## **III. Setting your password**

- Please note that the Factory set password for both channel 1 and 2 are 000000.
- The following steps will be used to set up your initial password and for any future password modifications.
- Same steps will be followed to program channel A and B.

### **Step 1 - Entering The Programming Mode**

- Press and hold button A for 2 seconds. LED light "A" will light up.

### **Step 2 - Enter The Old Password**

- Enter your existing password then press button A. Note: if programming for the first time enter the code 000000 followed by button A. LED light "A" & "1" will light up.

### **Step 3 - Enter The New Password**

- Enter your new 6-digit code followed by button A. LED light "A", "1" & "2" will light up.

### **Step 4 - Enter The New Password Again**

- Enter your new 6-digit code again followed by button A. LED light "A", "1" & "2" will all flash twice and then turn off

### **Step 5 - Setting Your New Password is Now Complete**

**\*Please follow the same instruction above for programming your new code to channel B. Replace any action involving button A and LED light A with button B and LED light B\***

## **IV. Syncing Your Keypad to Your Operator**

- Locate the Eagle Chrome series receiver. You may have to remove the operator cover to do so.
- Press and release the black learn button on the receiver. By doing so the LED on the receiver will turn from green to red.
- Enter your 6-digit code on the keypad followed by pressing button A, TWICE.
- The red light will flash and turn back to green which will indicate that the receiver is now synced with your keypad.

**\*Please follow the same instruction above for syncing your keypad to your channel B operator. Replace any action involving button A with button B\***

## **V. Regular Operation**

### **Operating instructions for channel A**

- Enter your code followed by pressing button A.
- Note: If more than 4 seconds pass between entering your code and pressing button A, the signal will NOT transmit.

### **Operating Instruction for Channel B**

- Enter your code followed by pressing button B
- Note: If more than 4 seconds pass between entering your code and pressing button B, the signal will NOT transmit.

## **VI. Resetting Your Password**

### **If your password has been forgotten or lost please follow the instruction below to reset**

- Using the key provided, open the lock located at the bottom of the keypad.
- Locate the battery inside and remove it.
- Press and hold any button on the keypad while remounting the battery.
- Once the battery is in place release the button you are holding down on the keypad.
- All 4 LED lights will turn on and then proceed to turn off one by one.
- At this point the password has now been reset back to the factory setting of 000000.
- Note: The keypad will have to be synced to your Eagle Chrome Series receiver after this procedure.

## **VII. Installation**

- It is important to test the functionality and the effective working range before installation.
- The range of the wireless keypad might be reduced 25-30% if the battery is low on power.
- Keep the clear cover closed after each use of the keypad to prevent dust and dirt accumulation.
- Do not install the product near any metal objects otherwise your signal will be shielded

**Step 1 – Insert the key inside the lock and turn clockwise**

**Step 2 – Remove the face plate of the keypad**

**Step 3 – Locate the 5 open holes and mark them where they need to be fixed**

**Step 4 – Create 5 holes in area where you will mount the keypad and then install the expansion screws**

**Step 5 – Insert the 5 metal screws while securing the base to where you are mounting the keypad**

**Step 6 -Install the cover of the keypad and turn the key counter clockwise to lock.**