

User manual

INSTRUCTIONS FOR RADIO CONTROL OPERATOR SINGLE BUTTON ENTRY TRANSMITTER MODEL NO.: X220-1

Read the following instructions thoroughly before using transmitter.

Match the transmitter to receiver

- Press and hold a button on transmitter for transmission.
- Then press the Learn button on your receiver. The adjacent indicator light will flash. Release the button of transmitter. The receiver will now operate when you press the button of transmitter.

Detail for add/remove a transmitter, please check with the instruction of your receiver.

NOTE: If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak. Replace when necessary with a CR2032 3 Volt battery.

Remove the access cover from the front of the transmitter by sliding the cover for battery replacement (Figure C).

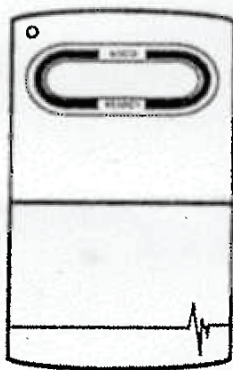 


Figure A

 
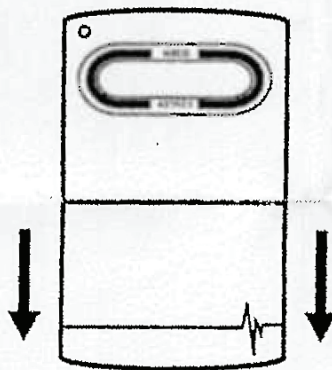 


Figure B

Slide the cover for battery replacement.

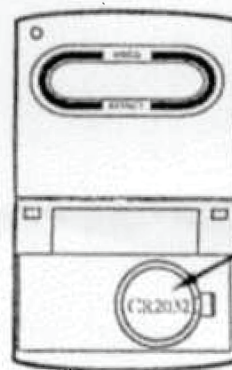

Battery Type
CR2032

Figure C

WARNING: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

By Email: sales@northshorecommercialdoor.com

North Shore Residential Door
162 Edgewood Street
Elyria, Ohio 44035

Phone 800-783-6112
Fax 440-365-3514