8832T



Two Button Transmitter: Match dipswitches 1 thru 8 on both transmitter and receiver. Set the 9th dipswitch in individual receivers accordingly.

Receiver	Transmitter	9th Dipswitch Receiver
Door 1	Left Button	4410
Door 2	Right Button	"o"

[&]quot;Changes or modifications not expressively approved by the party responsible for compliance could void the user's authority to operate the equipment"