

PROGRAMMING INSTRUCTIONS











- 1. Press the Learn button on the rear control panel of the opener. The courtesy light will illuminate (G315 unit) or the "OK" LED will illuminate (G628 unit). The unit is now ready to pair with the remote within the next 30 seconds.
- 2. Press the desired button on the remote
- 3. Courtesy light will flash twice (G315 unit) or the "OK" LED will flash and beep twice (G628 unit) indicating the remote has been coded.
- 4. Up to 20 Remotes (including wireless entry keypad) can be stored to the unit.

(Instructions Vary Among the Different Brands)



