

Programming Menu for **SOMMER Wireless Keypad (Telecodey)**



(item no. 4077V000)

STEP 1: KEYPAD ACTIVATION (FIRST USE ONLY)

1. Press the **M** button until the red LED lights up (8 sec.)

STEP 2: PROGRAMMING ACCESS CODE

1. Press the **P** button on the Keypad
2. Press the first button of your access code
3. Press the **P** button on the Keypad
4. Press entire access code
5. Press the **P** button again to complete the programming

STEP 3: PROGRAMMING KEYPAD TO CONTROL HOUSING

1. Press Learn button on control housing once (solid LED)
2. Enter access code immediately on the Keypad

CHANGING THE ACCESS CODE

1. Press the **P** button on the Keypad
2. Enter existing access code
3. Press the **P** button
4. Enter new access code
5. Press the **P** button again to complete the programming

WE STRONGLY SUGGEST ATTACHING THE RESET STICKER TO THE CONTROL HOUSING!

ERASE ACCESS FROM KEYPAD

1. Press the **M** button on the Keypad
2. Press the **P** button
3. Enter 9 digit reset code, see adhesive label
4. Press the **M** button
5. Press the **P** button
6. LEDs 1+2 are lit for 2 seconds and all previous access codes are now deleted from the Keypad

Note: The keypad will still transmit the first digit from the original entry code to the opener.

In order to delete the radio code: Press and hold learn button on the power head until LED is flashing (approx. 7 sec.). Press desired Keypad button. It will delete the first digit from the entry code.



sommer-usa.com
1-877-766-6607

SOMMER USA, Inc. | 3308-C Oak Lake Blvd. | Charlotte, NC 28208