

1. INTRODUCTION

In this package, you will find a keychain transmitter with 12V alkaline battery and a wireless switch receiver.

Wireless Switch Receiver



Keychain Transmitter (Battery inside)



2. INSTALLATION


- 1 Plug the receiver into a powered, 120VAC electrical outlet inside your house. (Note: This receiver is designed to be used indoor only. Do not use this receiver in an outdoor environment.)
- 2 Once the receiver is plugged into an electrical outlet, the red LED on the front of the unit will be "on" indicating the unit is in standby mode.
- 3 Plug in the light fixture or small appliance that you would like to control into the receiver, as shown.
- 4 If there is a power switch on the plugged in light fixture or small appliance, please turn it on. The receiver is ready to be activated.
- 5 Pressing the appropriate button will turn on the plugged in device and the red LED on the front will flash. (Caution: When the red LED on the unit is flashing, that means output outlet is powered. Do not disconnect / connect devices from / to the receiver's outlet when the red LED is flashing.)



3. PROGRAM A TRANSMITTER TO THE RECEIVER

The transmitter in this kit has been programmed to the receiver in the factory. You need to do the programming only if you add additional transmitters to the receiver.

- 1 Plug the receiver into an electrical socket.
- 2 Press and hold the learn button on the left hand side of the receiver. The red LED on the receiver will flash.
- 3 Simultaneously, press your assigned button (either button A or B) of the transmitter you want to program to the receiver.
- 4 The receiver red LED will go off indicates the programming is completed.
- 5 To program the transmitter to control another receiver, repeat process (1) to (4) but pressing another button (A or B).

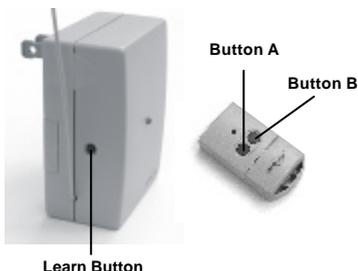

4. REMOVE TRANSMITTER FROM THE RECEIVER

You can delete the transmitter from a receiver.

- 1 Unplug the receiver from the electrical socket.
- 2 Press and hold the learn button on the left hand side of the receiver when plugging the receiver into an electrical socket, the red LED on the receiver will flash rapidly. All the transmitters are deleted.


5. OPERATION

To activate the receiver, simply press the appropriate button on the transmitter, it will activate the plugged in device. Pressing it again will turn off the plugged in device.

6. BATTERY

12 volt alkaline battery (size 23A) (included).

It is time to change the battery when the red LED on the transmitter does not turn on when either button is pressed.

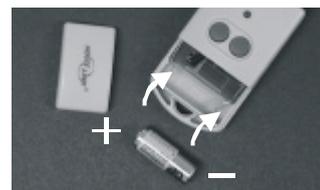

7. ADDITIONAL RECEIVER

There are 2 buttons on your transmitter, the other button can be used to control another Skylink® Garage Door Receiver Model 18R (sold separately) or Skylink® Wireless Switch Receiver Model SW-18R (sold separately).



8. ADDITIONAL TRANSMITTER

You can add up to 15 transmitters as you want to control the same receiver. Simply program the transmitters to the receiver. Skylink® offers Keychain Transmitter Model 18T4 to work with your receiver. For more information, please visit our website at www.skylinkhome.com or contact us.



9. CAUTION

RISK OF ELECTRICAL SHOCK. FOR INDOOR USE ONLY.
CAUTION : NOT FOR USE WITH DIMMER. DISCONNECT POWER BEFORE SERVICING.

Maximum Rating :
 Input : 120VAC 60Hz
 Resistive : 8A (960W)
 Incandescent : 300 watts
 Motor Load : 1/3 HP

10. FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:
 Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

11. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

12. CUSTOMER SERVICE

If you would like to order Skylink's products or have difficulty getting them to work, please :

1. visit our FAQ section at www.skylinkhome.com, or
2. email us at support@skylinkhome.com, or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST. Fax (800) 286-1320

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3
 Email: support@skylinkhome.com
<http://www.skylinkhome.com>
 P/N. 101A289-001 Rev.1
 US Patent. D380895
 ©2005 SKYLINK GROUP