

## Transmitter Solutions Firefly3™ Type: FIRIIL318ALD21K3

FCC ID: SU7L318ALD21K3

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept interference received, including interference that may cause undesired operation.

### NOTICE

Any changes or modifications to Transmitter Solutions equipment not expressly approved by Transmitter Solutions could void the manufacturer's warranty and could void the user's authority to operate the equipment.

### WARRANTY

The warranty period of Transmitter Solutions Firefly3™ transmitters is twenty-four (24) months. This warranty shall begin on the date the transmitter is manufactured. During the warranty period, the product will be repaired or replaced (at the sole discretion of Transmitter Solutions) if the product does not operate correctly due to a defective component. This warranty does not extend to (a) the transmitter case, which can be damaged by conditions outside the control of Transmitter Solutions, or (b) battery life of the transmitter. This warranty is further limited by the following disclaimer of warranty and liability:

EXCEPT AS SET FORTH ABOVE, TRANSMITTER SOLUTIONS MAKES NO WARRANTIES REGARDING THE GOODS, EXPRESS OR IMPLIED, INCLUDING WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. BUYER MAKES NO RELIANCE ON ANY REPRESENTATION OF TRANSMITTER SOLUTIONS, EXPRESS OR IMPLIED, WITH REGARD TO THE GOODS AND ACCEPTS THEM "AS-IS/WHERE-IS". TRANSMITTER SOLUTIONS SELLS THE GOODS TO BUYER ON CONDITION THAT TRANSMITTER SOLUTIONS WILL HAVE NO LIABILITY OF ANY KIND AS A RESULT OF THE SALE. BUYER AGREES THAT TRANSMITTER SOLUTIONS SHALL HAVE NO LIABILITY FOR DAMAGES OF ANY KIND, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING INJURIES TO PERSONS OR PROPERTY, TO BUYER, ITS EMPLOYEES OR AGENTS, AS A RESULT OF THE SALE. BUYER ALSO AGREES TO HOLD TRANSMITTER SOLUTIONS HARMLESS FROM ANY CLAIMS BUYER, OR ANY THIRD PARTY, MAY HAVE AS A RESULT OF BUYER'S USE OR DISPOSAL OF THE GOODS. BUYER HAS READ THIS DISCLAIMER AND AGREES WITH ITS TERMS IN CONSIDERATION OF RECEIVING THE GOODS.



3788 West 2270 South, Suite E  
Salt Lake City, UT 84120  
(866) 975-0101 • (866) 975-0404 FX  
[www.transmittersolutions.com](http://www.transmittersolutions.com)


## Manual - 318 1 Button

Transmitter  
Solutions



TRANSMITTER

with Flashlight

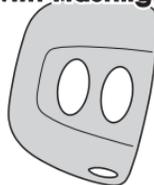

*Thank you for choosing a Transmitter Solutions product.  
Please read this manual carefully before using the product.*

Made in Taiwan. Copyright © 2015 Transmitter Solutions.

## CONTENTS

### 1 - TRANSMITTER OVERVIEW

- 1A - General information
- 1B - Technical specifications
- 1C - Main components

### 2 - NUMBERING

### 3 - PROGRAMMING

### 4 - OPERATION

### 5 - BATTERY ACCESS

### 6 - TROUBLESHOOTING

#### 1A - General information

The Transmitter Solutions- Firefly3™ Transmitter is a very small (1-1/2" x 2-1/8" x 3/8") key chain style wireless transmitter operating at 318 MHz. The Firefly™ achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 318 frequency, including all *Allstar*® Model 9931 and *Heddolf*® P220 9-dip switch digital receivers.

*Allstar* and *Heddolf* are registered trademarks owned by *Allstar* Corporation and *Heddolf* respectively.

## 2 - CODING

Set the nine-digit toggle code switch to match the code set in the receiver. Access to the Firefly™'s toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper clip, gently switching the small switches to either the +, -, or neutral position. (In Detail below, switches 1 and 3 are in the + position, switches 2, 4, 7 and 9 are in the - position, and switches 5, 6 and 8 are in the neutral position.) When complete, reinstall battery and replace back cover inserting bottom clip into front groove, then replace and tighten screw.

## 3 - OPERATION

Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

**Step 1.** Push the Firefly™'s button from a distance of about ten feet. If the receiver activates, the switches are properly matched.

**Step 2.** Test the transmitter from several locations to discover any "blind spots" caused by interference.

**Flashlight** is activated by pressing the smaller button.

## 4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery. See "coding" for proper removal and replacement of back cover.

## 5 - TROUBLESHOOTING

PROBLEM	SOLUTION
The system does not receive the transmitter signal. The transmitter LED will not light.	<ul style="list-style-type: none"><li>• Ensure clear plastic battery insulator has been removed; OR</li><li>• Replace the transmitter battery.</li></ul>
The system does not receive the transmitter signal. The transmitter LED is ON.	Check to ensure the transmitter switches are coded to match your system receiver.
The operating range is reduced.	Replace the transmitter battery.

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

## 1B - Technical Specifications

Operating frequency :	318 MHz
Number of buttons :	1 plus flashlight button
Battery :	1 ea. 12V A23
Operating temperature :	-20°F - 100°F
Overall dimensions :	1-1/2 x 2-1/8 x 3/8 inch
Weight:	1 oz.

## 1C - Main components

