3 Connect wires

Feed wires through back of unit and connect as shown.

Additional wiring diagrams can be found on **Page 3**.

If plugging into duplex outlet, remove screw from outlet plate, and secure with included screw.

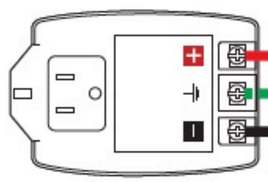

12-V AC/DC Adapter
(Model PS-12DC1 included)

The GROUND terminal is optional unless required by local code(s). If using, please connect to earth ground or equivalent.

OR



Third-Party 12–24-VAC/DC Power Source

Ascent Power and Relay Terminals

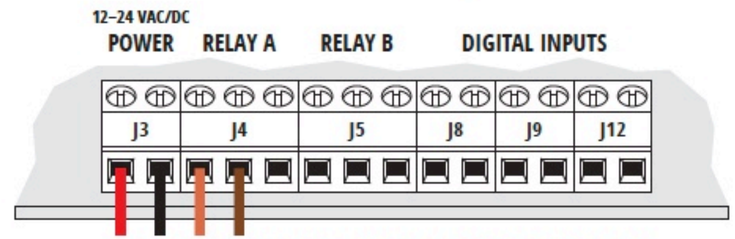

Gate Operator / Door Opener

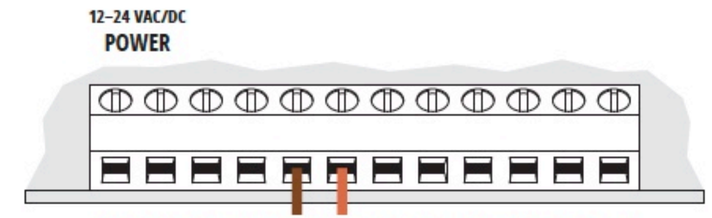

POS. (+) | NEG. (–) | N/O | COM | N/C | N/O | COM | N/C | # 1 | GND | # 2 | GND | # 3 | GND

POS. (+) | NEG. (–) | COM | RADIO | COM | FREE EXIT | COM | REVERSE LOOP | COM | OPEN | STOP | CLOSE

Relay B can be wired to a second device in the same manner.

Consult gate operator or door opener manual for exact connections.

Terminals vary widely across manufacturers and models.

⚠ CAUTION!

If you will not be using the 12-V AC/DC adapter, please go to **Page 4** and follow the procedure, **Using a Third-Party Power Source**.

Do not exceed 24 VAC/DC! Failure to choose a compatible power source can damage unit!

STOP!

Before going forward, double check wiring and ensure unit has power!

For additional wiring options, see **Page 3**.

4 Close and lock front panel.

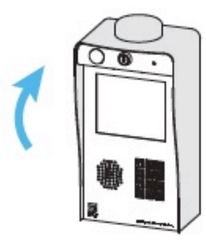

5 Make sure gate path is clear, then key in temporary code 2012 on keypad and confirm gate opens.

2 0 1 2

Adding and deleting codes is done through Summit Control and **NOT** from the keypad!

INSTALLATION COMPLETE!

Now follow the **Activation Guide** to create an account and begin using Ascent.

© 2018 Security Brands, Inc. All rights reserved.