



2000R

INSTALLATION GUIDELINE

COMPONENTS

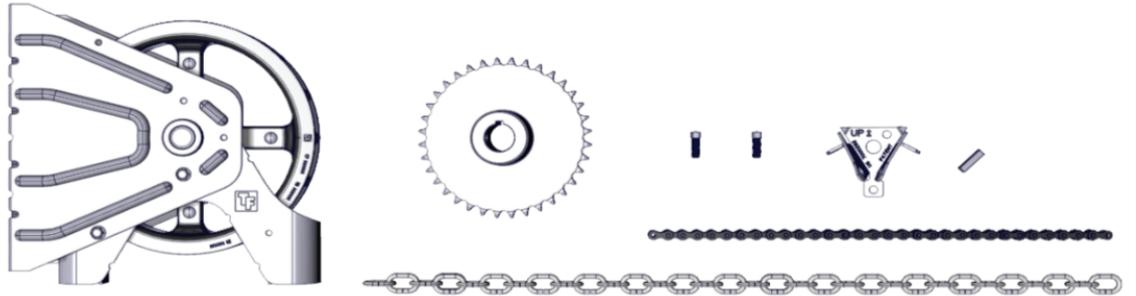

INSTALLATION GUIDELINE

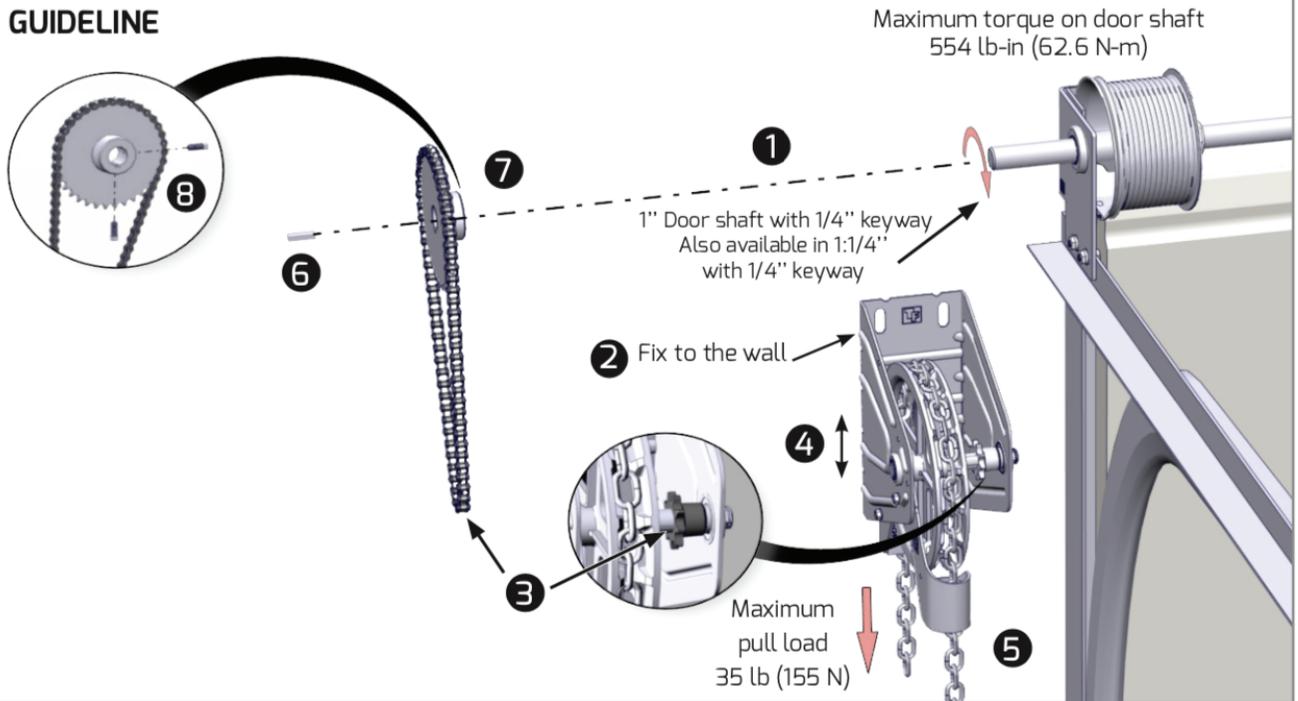

- 1 Slide 4B36 sprocket on door shaft
- 2 Fix chain hoist on wall (fastener not included)
- 3 Wrap roller chain around door and hoist sprockets and secure with connecting link provided
- 4 Tighten roller chain by sliding chain hoist
- 5 Insert hand chain in chain hoist, then adjust the hand chain length if necessary, and close the open link (see page 2)
- 6 Insert shaft key in door sprocket and door shaft
- 7 Align door sprocket and chain hoist sprocket
- 8 Insert set screws in door sprocket and tighten

DISCLAIMER: Door manufacturer's installation instructions supersede these instructions.

CAUTION


Do not use chain hoist to wind the door's spring. For standard lift or low headroom application, it is preferable to use pusher springs to prevent cable jumping out of the drum. Use on counterbalanced sectional door only.

Min. offset
3.375" (85.7 mm)

Extended shaft min.
3" (76 mm)




Chain hoist may be mounted on either side of the door

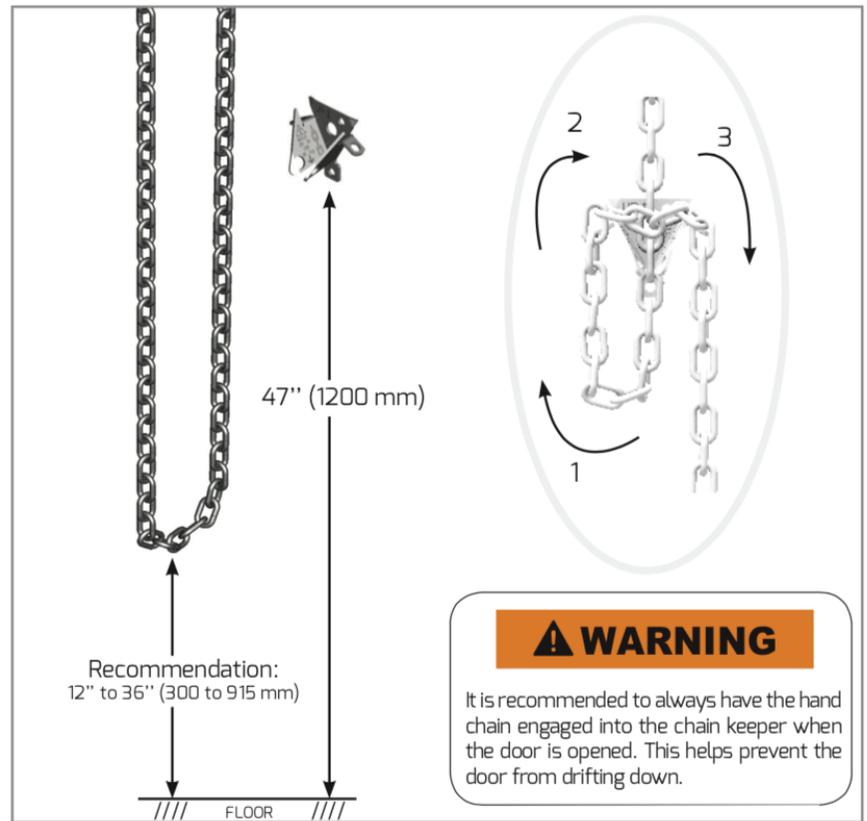

OPTIONAL

HAND CHAIN TENSIONER

Add the hand chain tensioner for a better control of chain movements.

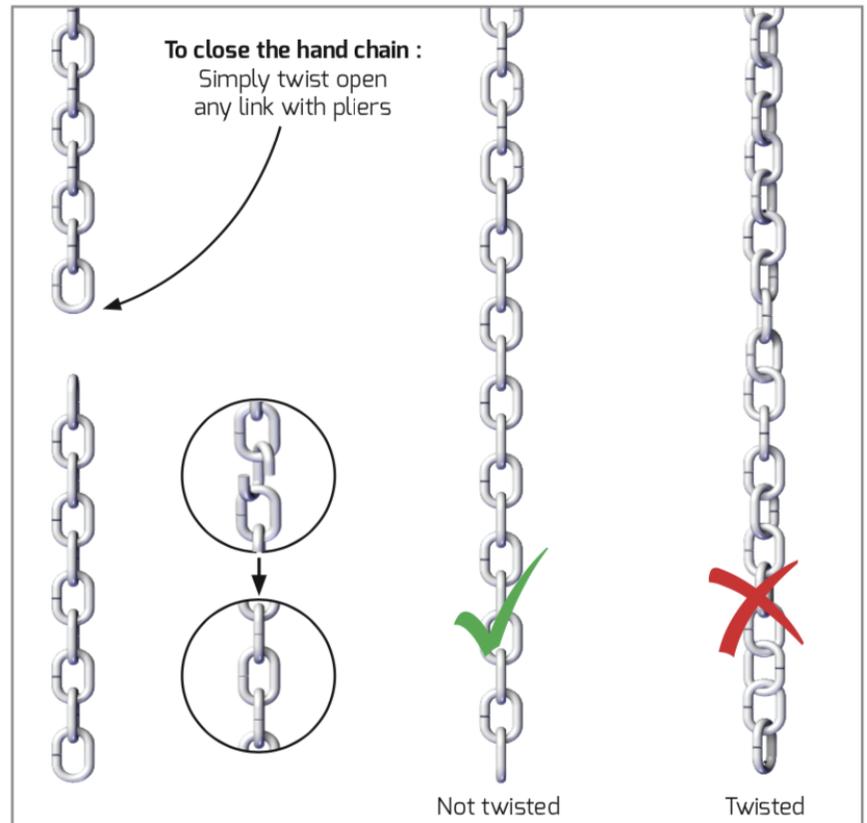

Contact your sales representative for more information



800-783-6112

www.northshorecommercialdoor.com

support@northshorecommercialdoor.com

