

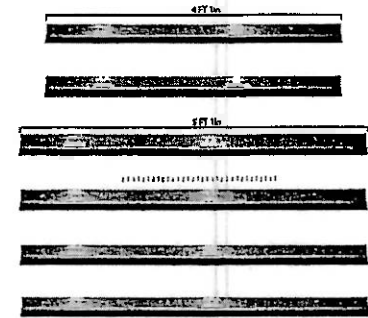


Brush Seal Kit Installation Instructions

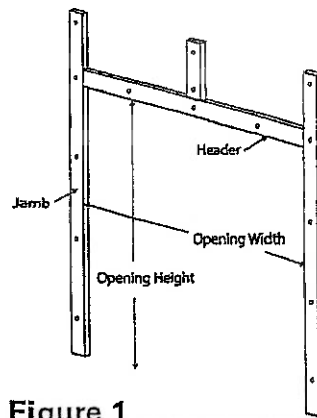

TOOLS NEEDED:


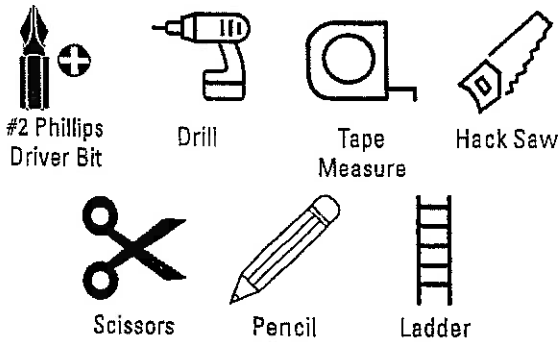


Step 1: Lay your kit components out and identify which piece is needed to install on the header of your door. If you have an 8X10 door, the header section would be 4 feet long for a retail kit, and 8 feet for a professional kit (Figure 2).

Figure 1

Figure 2

Step 2: Remove any existing weather seal around the jamb of your garage door

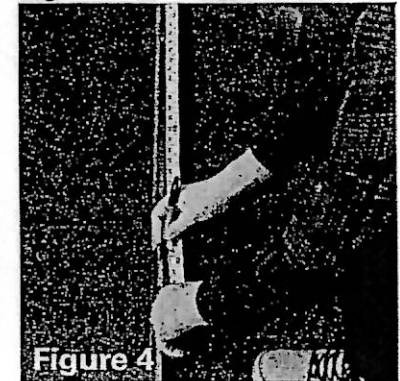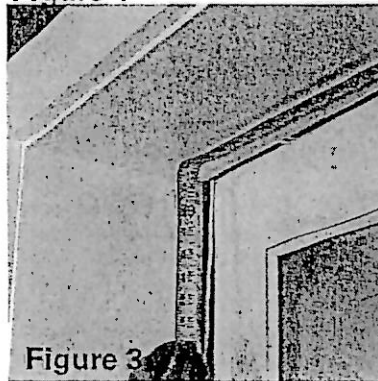

Step 3: Measure the top or header (Figure 1 & 3) of your garage door. Mark the measurement of the header with your pencil on the retainer (Figure 4).

Figure 3

Figure 4

Step 4: If needed, cut the retainer and brush to match the measurements you took using the hack saw and scissors (Figures 5 and 6).

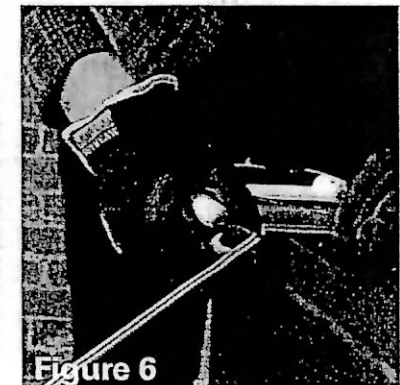
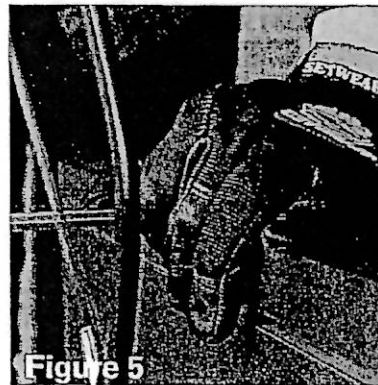


Figure 5

Figure 6

Step 5: Mock-up the positioning of the kit for the sides and header of your door. With a pencil to mark the mounting position by using the pre-drilled holes in each retainer. If needed, use the hack saw to cut down the retainer to fit. It is recommended that the brush seal makes contact with the door.

Step 6: Using a ladder, drill, #2 phillips driver bit, and the included phillips pan Head tek-screws, secure the vertical portions of the kit to the header. (Figure 7)

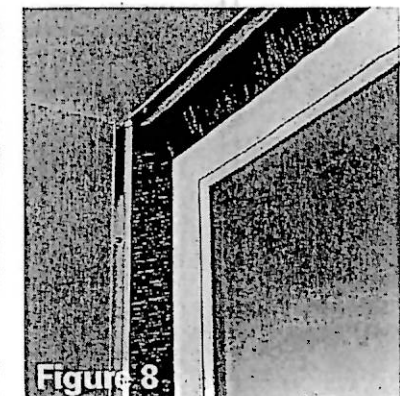
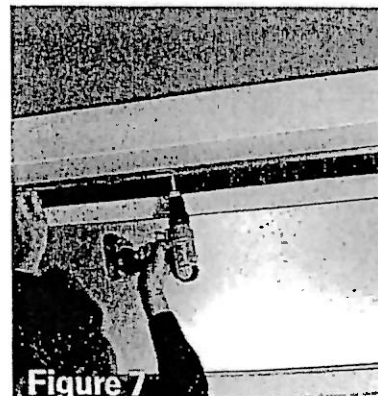


Figure 7

Figure 8

Step 7: Repeat step 4 starting from the bottom of the door. Install the remaining kit segments to the sides of the door until the installation is complete.