


Upgrade to OmniControl™ Board From the older style control board

Replacement of Board

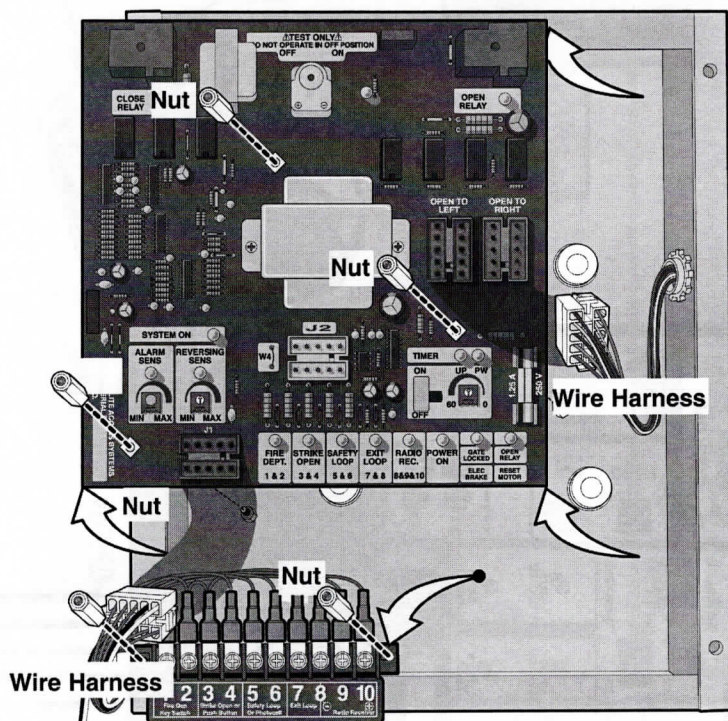


Disconnect power to operator. Disconnect the 2 wire harnesses and remove the old board by removing the 3 nuts. Remove the terminal connection strip by removing the 2 nuts. Reverse this process to install the OmniControl™ board.

⚠ WARNING



To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution, disconnect electric power to operator **BEFORE** installing.

ALL electrical connections **MUST** be made by a qualified individual.

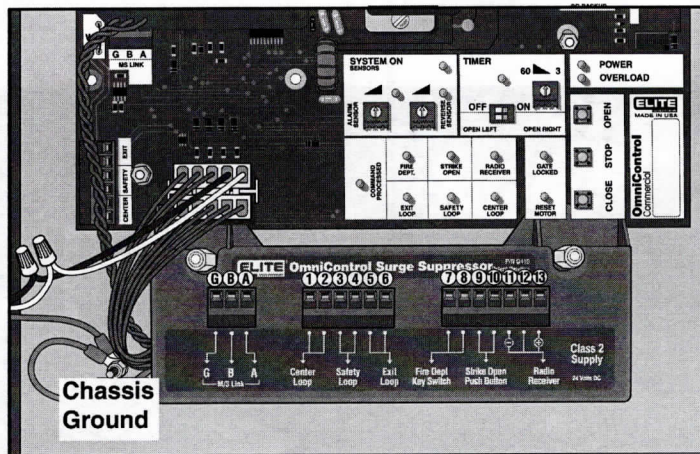

Caution Terminal connections for OmniControl™ are different than the existing board terminal connections.

Limit Switch Wiring

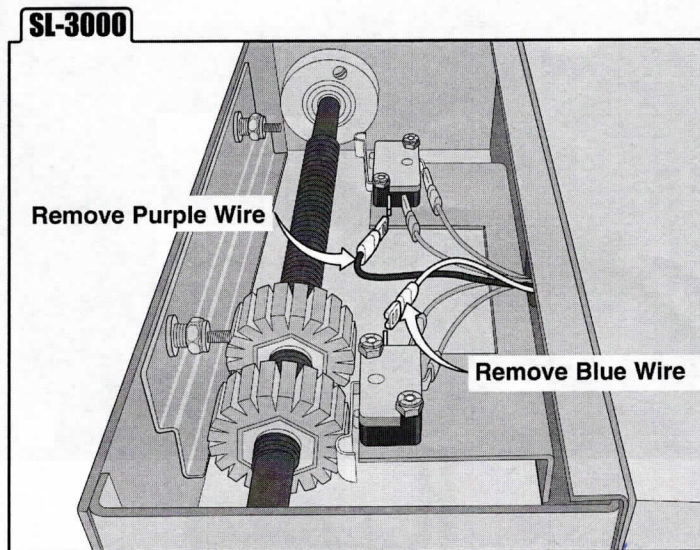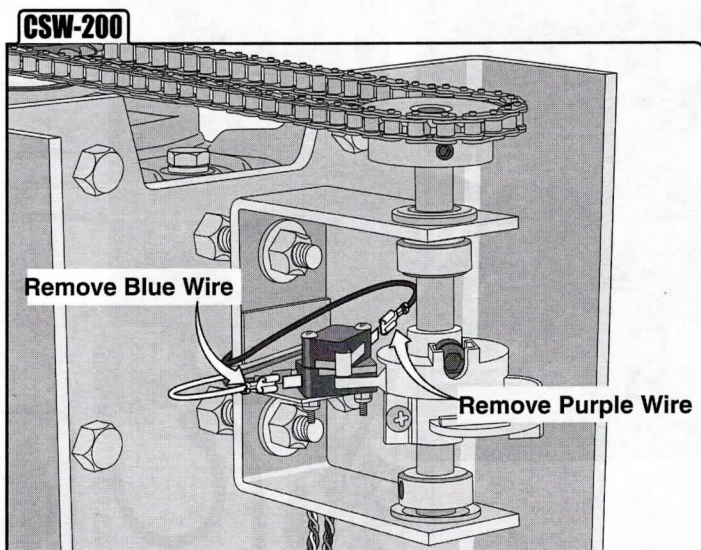

The blue and purple wires are **NOT** used on the limit switches with the OmniControl™ board. Reconnect power to operator after installation is complete.

Terminal Input Wiring Connections

For the OmniControl™ board

